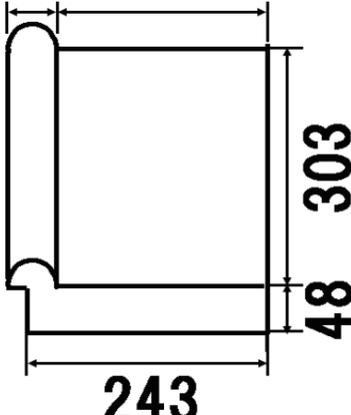
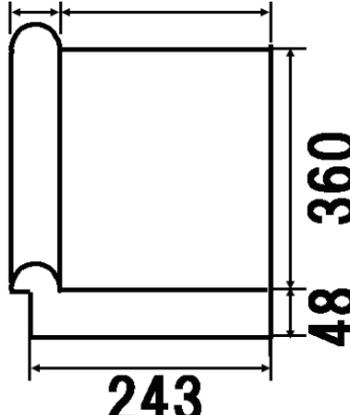
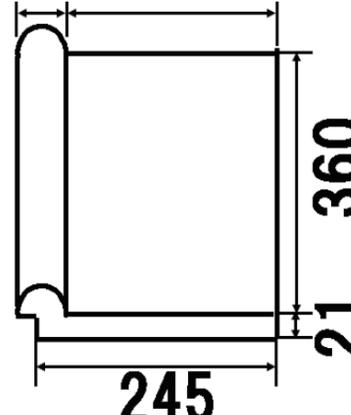
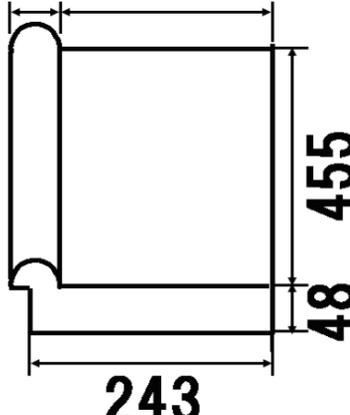
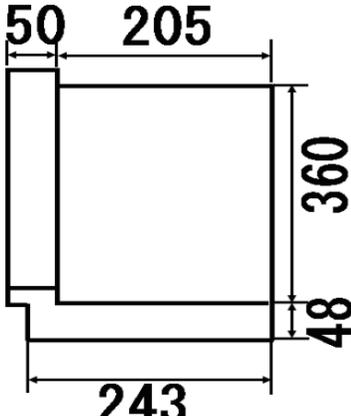
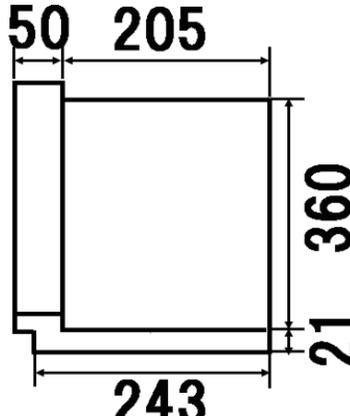
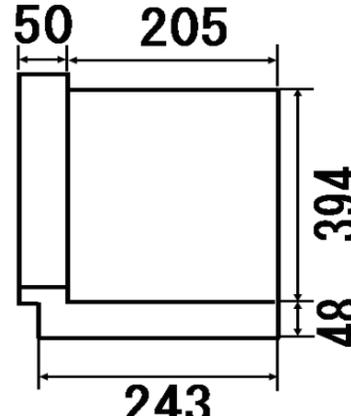
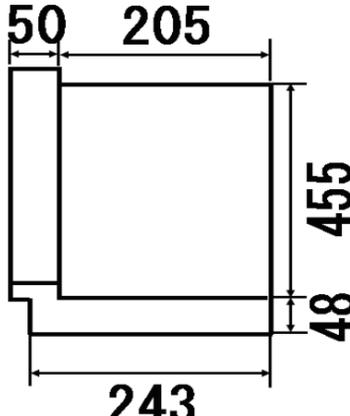
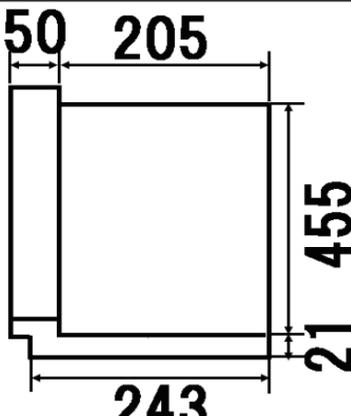
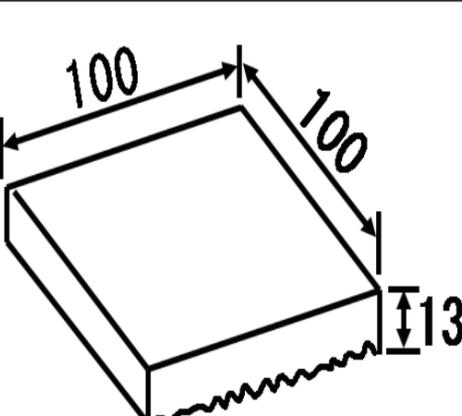
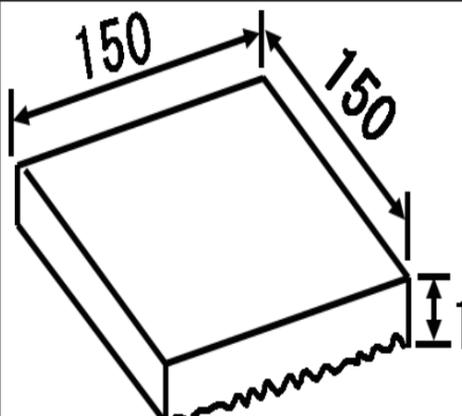
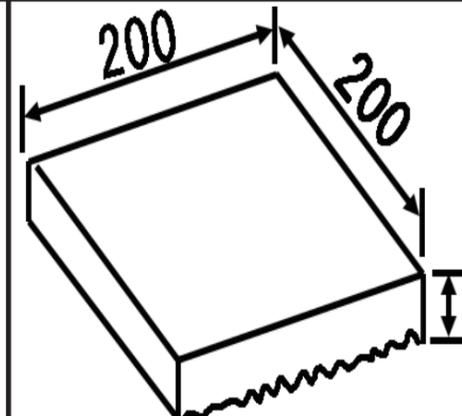
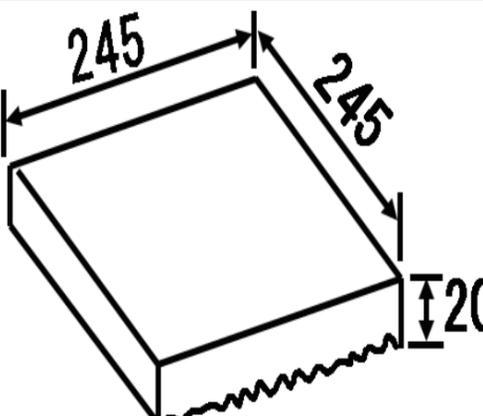
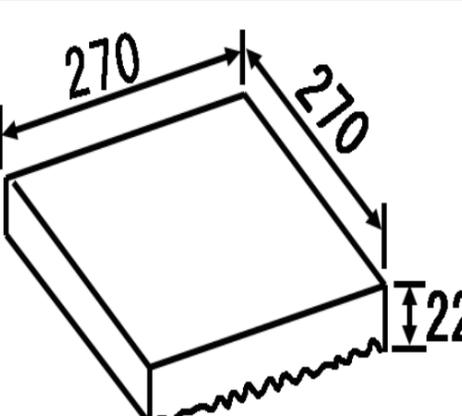
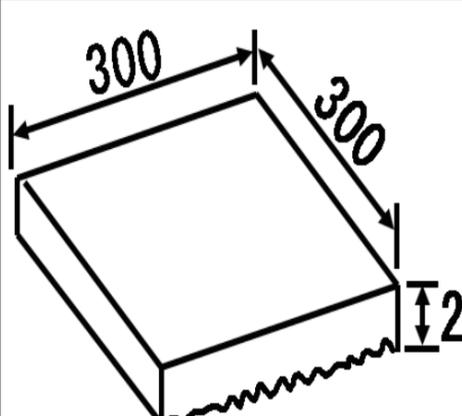
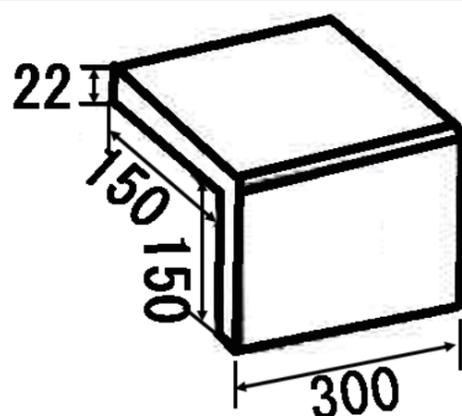


<p>53判【尺】丸棧垂付目板</p>  <p>243 303 48</p>	<p>53判【尺2寸】丸棧垂付目板</p>  <p>243 360 48</p>	<p>53判【尺2寸】丸棧切落目板</p>  <p>245 360 21</p>	<p>53判【尺5寸】丸棧垂付目板</p>  <p>243 455 48</p>
<p>53判【尺2寸】角棧垂付目板</p>  <p>50 205 243 360 48</p>	<p>53判【尺2寸】角棧切落目板</p>  <p>50 205 243 360 21</p>	<p>53判【尺3寸】角棧垂付目板</p>  <p>50 205 243 394 48</p>	<p>53判【尺5寸】角棧垂付目板</p>  <p>50 205 243 455 48</p>
<p>53判【尺5寸】角棧切落目板</p>  <p>50 205 243 455 21</p>	<p>53判 敷瓦 100角</p>  <p>100 100 13</p>	<p>53判 敷瓦 150角</p>  <p>150 150 15</p>	<p>53判 敷瓦 200角</p>  <p>200 200 18</p>
<p>53判 敷瓦 245角</p>  <p>245 245 20</p>	<p>53判 敷瓦 270角</p>  <p>270 270 22</p>	<p>53判 敷瓦 300角</p>  <p>300 300 22</p>	<p>53判 敷瓦 300角コーナー</p>  <p>22 150 150 300</p>
<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>
<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>	<p>53判</p> <p>準備中</p>